


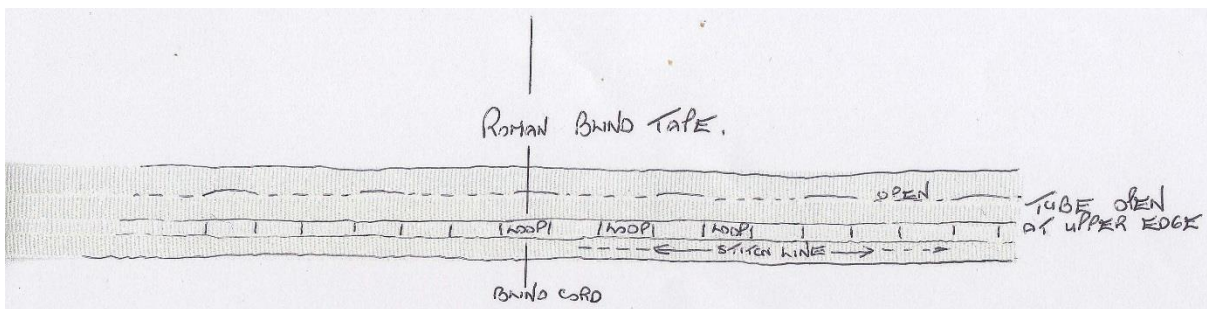

## ROMAN BLIND TAPE

Our luxury roman blind tape is a 2cm wide woven polyester tape that comprises a: -

- 1cm tube which is open at 3cm intervals on one edge. (The tube openings allow for the tape to be attached to the blind first and then the rods inserted later)
- A continuous loop across the tape stitched at 1cm intervals for the attachment of roman blind cord.



### Attaching the Tape

On the reverse side of the blind, calculate where the roman blind tape is to be attached and then mark either with pins or a chalk pencil.

Place the tape on these marks with the loops facing you and the openings in the tubing uppermost

Stitch as close as possible to the bottom edge of the tape (only one row of stitching necessary)

Where the tape meets the edges of the blind fold the tape in and hand or machine finish all the tape edge. (this helps to hold the tape flat against your lining)

When your blind is fully finished you can insert the roman blind rods and thread the roman blind cord down from the headrail